


CHIP's LED Bookmark Instructions


SolderingSunday.com


Step 1

Punch out holes for LEDs.

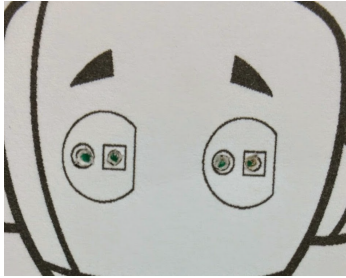


Step 2

Push legs of the LEDs through card.
Short leg (- negative / cathode) through square hole.
Long leg (+ positive / anode) through round hole.

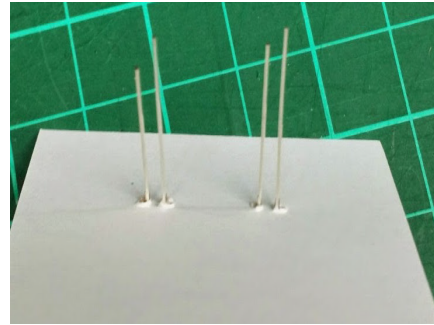


Step 3

Bend short legs (- negative / cathode) flat.

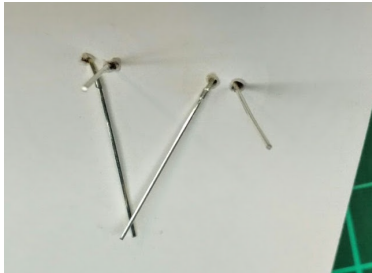


Step 4

Place Battery.
(-) negative side down on leads.

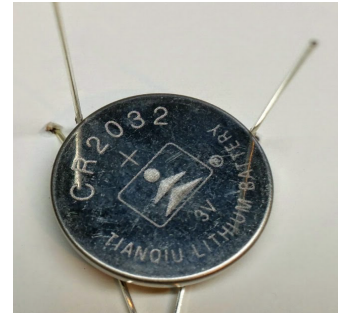

Step 5

Fold (+) positive leads down.
The LEDs should be lit. If ok, tape in place.

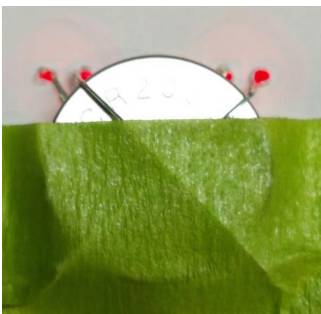

Step 6

Fold. Enjoy.

